 


 
QUICK START

LP1000

It's easy to connect your computer or video player to the LP 1000 and start presenting.

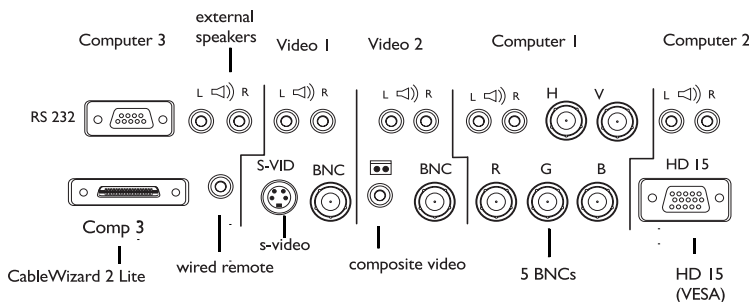

The projector comes with two computer cables (the In Focus CableWizard cable and a standard VESA cable), and an audio video (A/V) cable.



CableWizard2 Lite computer cable



 


VESA computer cable





A/V cable

- 1 To connect a computer using the CableWizard cable, plug one end of the cable into the video connector on your computer; and plug the other end into the CableWizard connector (labeled Comp 3) on the projector.

To connect a computer using the VESA cable, plug one end of the cable into the video connector on your computer; and plug the other end into the HD 15 connector on the projector.

To connect a video player, plug the A/V cable's yellow connector into the video out port on your VCR, and plug the other end into the composite video connector (labeled ) on the projector. Plug the white audio cable into the left "audio out" port on your VCR, plug the red audio cable into the right port. Plug the other ends of the cables into the left and right audio in ports (labeled L ) R ) on the projector.

For information on connecting equipment using BNC or S-video cables, connecting peripherals like speakers or remotes, or connecting Macintosh computers, refer to the *LP 1000 User's Guide*.

- 2 Plug the power cord into the projector and into an electrical outlet.
- 3 Turn on the projector by pressing the power button on the remote or keypad, then your computer or video player. If you are using the CableWizard, press the "comp 3" button on the remote; if using a VESA cable, press "comp 2". If you're using a laptop, activate its external video by pressing the correct activation commands (sometimes the activation button is labeled with an icon like /).
- 4 Position the projector the desired distance from the screen to get the desired image size.
- 5 If necessary, adjust the height, zoom, or focus of the image. To further adjust the image, open the menus by pressing the menu button on the remote or keypad and use the arrow buttons to make modifications. Refer to the *LP 1000 User's Guide* for details.

InFocus®



QUICK START

LP1000

SAFETY INSTRUCTIONS:

Please read and follow all safety instructions provided in this quick start and your User's Guide BEFORE using your new projector. Failure to comply with safety instructions may result in fire, electrical shock, or personal injury and may damage or impair protection provided by equipment. Please save all safety instructions.

Safety Definitions:

- **Warning:** Statements identify conditions or practices that could result in permanent personal injury.
- **Caution:** Statements identify conditions or practices that could result in damage to your equipment.

Safety Terms:

- **Warning:** Don't look directly into the lens when the projector is turned on.
- **Warning:** Don't block ventilation openings.
 - **Warning:** To replace the lamp, turn the power off and unplug the power cord. To avoid burns, wait 30 minutes before opening the lamp door. Follow all instructions provided in the User's Guide.
 - **Warning:** Please use the power cord provided. Connect the power cord to a receptacle with a protective safety (earth) ground terminal.
- **Warning:** Refer all service to qualified service personnel. Servicing your own projector will void the warranty. See below for the customer service contact information.
- **Caution:** Don't set liquids on the projector. Spilled liquids may damage your projector.
- **Caution:** Don't place the projector on a hot surface or in direct sunlight.
- **Caution:** To replace the lamp, please follow all the instructions provided in the User's Guide.
- **Caution:** Do not drop the projector. Transport the projector in an In Focus-approved case; see the Appendix of the User's Guide for a list of cases.
- **Caution:** For ceiling mount installations, please use the ceiling mount recommended in the User's Guide and follow all instructions provided with it.



Attention: For information about usage of a feature, please refer to the User's Guide.



Warning: Hot surface. Do not touch.



An arrow pointing to the referenced area of the projector.

Customer Service

If you need assistance, call In Focus Customer Service directly at **1-800-799-9911**. Support is free between 5 a.m. and 5 p.m. PST, Monday through Friday. Support is available in North America after hours and weekends for a fee at **1-888-592-6800**.

Or, send us an e-mail at techsupport@infocus.com

In Europe, call In Focus in The Netherlands at (31) 35-6474010.

In Singapore, call (65) 332-0659.

InFocus®